

ARCTIC OWL™



TRADER
OWNED & OPERATED

OWPIR360 & OWPIR360S 360° Infrared Sensor

Manual Override

When the power is initially turned ON, the fitting operates in AUTO mode.

In this mode, the sensor turns the light ON and OFF automatically.

The MANUAL OVERRIDE function means that the fitting can be put permanently 'ON'.

In this mode, the PIR sensor is disabled and the light stays on.

Setting Manual Override

The lamp must be on to initiate MO.

Turn the wall switch 'OFF' and 'ON' twice (with 2 second wait between each action).

Wall switch action: OFF → ON → OFF → ON

Setting Auto

To change back to 'AUTO MODE', turn the power 'OFF' and wait for 10 seconds, then turn it back 'ON' again.

Wall switch action: OFF → Wait 10 Secs → ON

NOTE:

It is important to note that the wait time between switch actions is critical for this to function correctly. This tolerance on timing is tight to reduce the potential of nuisance triggering of this function. It may take several attempts to get used to setting manual override

