

BESMOKEY WIRELESS CONNECTION

Easy Step by Step guide to connect our **BESMOKEY10WM**, **BESMOKEY10BW** & **BESMOKEY10REM**.

RANGE

BESMOKEY10WM when installed in a **BESMOKEY10** = 60m

BESMOKEY10BW = 100m

BESMOKEY10REM = 5m from the closest unit

Recommended to set up all units on the ground prior to mounting to walls/ceilings

1. Ensure ALL **BESMOKEY10**'s that are to be wirelessly linked have a **BESMOKEY10WM** installed.
2. Choose 1x **BESMOKEY10** (with wireless module) to become the Master. Mark this unit as MASTER for future reference.
3. The rest of the smokeys in the installations shall become "slaves".
4. Pull battery tab out of Master alarm.
5. Press TEST button on Master alarm 3 times within 2sec to put Master into pairing mode. Once in pairing mode the red LED on the master will remain solid.
6. With Master in Pairing mode, pull the rest of the battery tabs out of the **BESMOKEY10** or turn the switch on the base of the **BESMOKEY10BW** to ON (indicator light on the back will come on).
- 6a. If using **BESMOKEY10BW** as a Master the pairing mode will only last for 30sec, pairing mode is identified by a solid Blue LED indicator on the Master unit.
7. Press TEST button on all slave units 3 times in 2sec to pair to the Master unit.
8. All **BESMOKEY10**'s will sound their alarms for 0.5sec.
9. All **BESMOKEY10BW**'s will NOT sound their alarms when connected. They will have a red LED indicator flash on base of unit followed by a green LED for approx. 5sec.
10. With the master alarm still in pairing mode pull out **BESMOKEY10REM** battery tab and press NET button once for 1sec. Red LED on remote shall stay on for 8sec if successfully paired.
11. Press TEST button 3 times on the Master to exit pairing mode. Alternatively, after approx. 2.5mins of no pairing action the Master will leave pairing mode and return to normal operation.

Test Alarm

BESMOKEY10 – Press and hold the TEST button for at least 5sec

BESMOKEY10BW – Press and hold CENTER/TEST button for 5sec

Siren will sound once per sec for 3 sec, pause for 1.5sec then sound again.

For all other units in system alarm will sound twice for 10sec.

When both units are linked in the same system once testing has been completed, exiting TEST MODE will take anywhere from 1-5mins. Typically, **BESMOKEY10BW** will be slower at leaving than **BESMOKEY10**.

BESMOKEY10 Smoke Alarms come with a 10 Year Warranty from date of purchase. BESMOKEY10 Accessories are warranted for 7 Years from date of purchase. Proof of Purchase is required for Warranty Claims

– please see www.gsme.com.au for details regarding warranty claims.

