


# TRADER

# Installation Instructions LED Downlight Series

#### **Product Range**

SCDLLG - 8W LED Downlight, Dimmable, Colour Selectable

Product Specification				
Part Code	SCDLLG			
Colour Temp	3000K 4000K 5000K 5700K			
Lumen Output	750lm-670lm			
IP Rating	IP44 (from front only)			
Power	8W			
Beam Angle	60°			
CRI	>80			
Voltage Rating	220V-240V~ 50			
LED Lamp Life	35,000 Hrs			
Dimmable	Yes			
Operating Temp	-10°C to 40°C (			
Electrical Class	Class II			

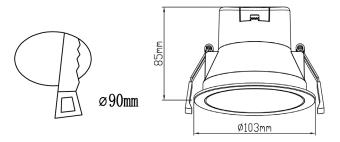


# **Pre-Installation Options**

Colour Temperature Selection - SCDLLG model only This model allows the installer to select between four colour temperature outputs.

Adjust the selector switch to the required output position.

Warm White (WW)	Cool White (CW)	Day Light (DL)
3000K	4000K	5000K/5700K

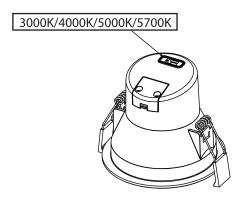



#### **Installation Method**

Read instructions and check you have all the tools and accessories to complete the installation correctly.

- Isolate the mains power supply before starting installation.
- Cut 90mm aperture in the ceiling.
- With the power turned off, make electrical connections. Pass mains plug through ceiling aperture and plug into socket in the ceiling place.
- Holding the luminaire level with front facing down, push the spring clips upwards and fit luminaire into the cut-out. Ensure the supply cables are dressed away from the fixings and ensure the luminaire is pressed carefully into the ceiling.
- When the luminaire is half way into the ceiling, release the springs. The luminaire should then hold itself firm. Press luminaire firmly into place. The product should be installed flush to the ceiling surface.

Restore the power supply, switch on and test for the correct operation.

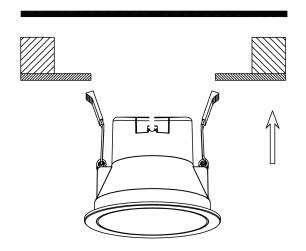

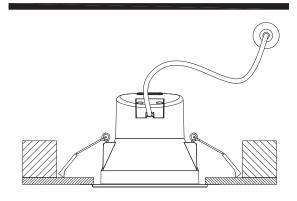



# Installation Instructions LED Downlight Series

# Clearances


Can be Covered and Abutted



IC-4 Rated

These luminaires comply with AS/NZS 69598.2.2. They are approved to not exceed 90°C when side abutted or covered with insulation. Building insulation used to abut and cover the luminaire must be a type that can maintain its dimensions and structural integrity when exposed to maximum surface temperature of the class luminaire, being 90°C and must withstand a 30sec needle flame test carried out in accordance with AS/NZS 60695.11.5 with the flame applied to all surfaces of the sample.

Combustable building element above fitting

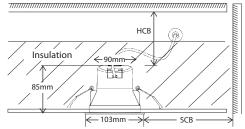

Combustable building element beside fitting

#### **Risk of Fire**

Required clearance from structural members and building elements

HCB: 0mm	MIC: 0mm
SCB: 0mm	SCI: 0mm

- HCB = Minimum distance between the top of the recessed luminaire and any building element above it.
- MIC = Minimum distance between the top of the recessed luminaire and the building insulation above it.
- SCB = Minimum distance between the side of the recessed luminaire and any building element.
- SCI = Minimum distance between the recessed luminare and any building insulation.

# **Dimming**

accessories

The Scorpion Downlights have been designed for optimum performance with our Dimpala range of dimmers.

#### **Dimpala Product Codes**

DIMR - Dimpala Universal Eclipse Dimmer
DIMPRX - Dimpala Push Rotary Dimmer No Glow
DIMPR - Dimpala Push Rotary Dimmer
Please refer to our Website or Catalogue for further detail and

Note: In some regions a slight flicker may occur when the luminaire is dimmed. This could be due to power line signals sent by electricity supply utilities. This effect is not a malfuntion of the luminaire or dimmer but could be a result of local power supply changes. If this occurs at any stage, adjusting the dimmer back to maximum output should minimise the effect.



#### **Important Information**

It is recommend that luminaires be installed and fitted by a qualified electrician, ensuring the installation complies to the current building regulations. These products are designed for connection to a 220-240V~50Hz supply.

Trader will not accept responsibility for any claims arising from incorrect installation or application.

If cleaning is necessary, ensure product is switched off and only wipe the accessible lens and shells with a damp cloth and dry off using a dry lint free cloth.

# Warning 2

Caution no user serviceable parts contained, risk of electric shock if dismantled. Cutting cables or damaging components will void warranty.

Check whether the product has been damaged in transport. Do not operate or install any product which appears damaged in any way. Return the complete product to place of purchase for inspection or replacement.

- 1. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
- 3. The luminaire is classfied as IC-4.
- 4. WARNING RISK OF OVERHEATING OR FIRE IF THE CLEARANCE DISTANCES ARE COMPROMISED

#### Warranty

This product has been manufactured to the highest quality standards. This product is warranted to the original purchaser and is not transferable.



The product is guaranteed to be free from defects in workmanship and parts for a period of 5 Years from the date of purchase, for full warranty detail please refer to www.gsme.com.au

GSM Electrical (Australia) Pty Ltd Level 2 142-144 Fullarton Road, Rose Park SA, 5067 P: 1300 301 838 E: service@gsme.com.au www.gsme.com.au