


## MCPUPP2GVPCBG

See current catalogue for further detail

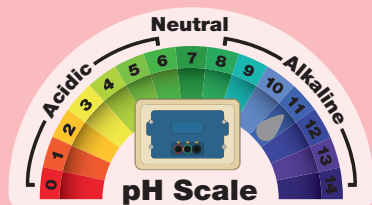

### Cleaning Guide:

Spraying cleaning products on to electrical products is not recommended.

It is important to ensure that switches are turned off before cleaning.


Do not use any cleaning sprays - only wipe down with damp cloth or rub with dry cloth. (Do not use an abrasive cloth as it may scratch the plastic).

Do not use harsh chemical cleaners as these can break down the plastic and cause it to crack.



## MEDICAT Puma Vandal Proof Range of Double Power Points

- Power points have Shutters and are Double Pole.
- Oval screw caps for extra adjustment on wall (no removable cover).
- Uses brass tunnel terminals that have the screws backed out for easier installation of cabling. Power point terminals have 5.7mm bore to suit 4 x 2.5mm<sup>2</sup> cable.
- Fits standard Australian wall boxes and mounting accessories that use 84mm mounting centres.
- Plates and dollies are made from UV stabilised polycarbonate to avoid discolouring.
- Power points achieve IK09 to IEC62262:2002.
- MCPUPP2GVPCBG is Beige marked with 'CLEANING PURPOSES ONLY'.
- Shutter operates from either earth or neutral
- Power points approved to AS/NZS3112.
- Blue base feature to show higher chemical resistance material for hospital environment.
- Typical example of size seen below:

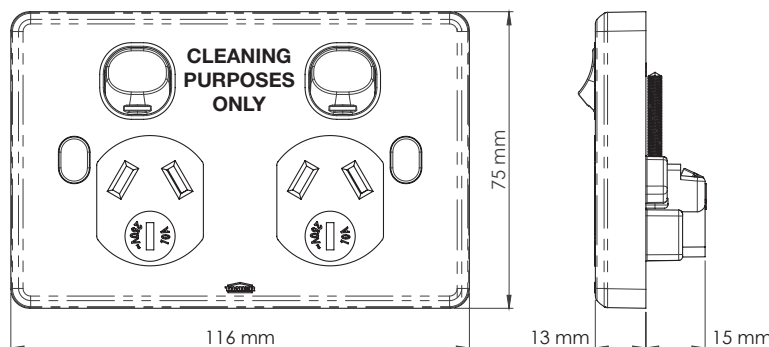

Catalogue Number	Description
MCPUPP2GVPCBG	Power Point Switched 2 Gang 10A 250V ac Double Pole Shuttered Vandal Proof CLEANING PURPOSES ONLY Chemical Resistant Beige

### Certification Number:

GMA-505204-EA

### GSM Electrical (Australia) Pty Ltd

Level 2, 142-144 Fullarton Road, Rose Park SA 5067

P: 1300 301 838 | E: service@gsme.com.au

www.gsme.com.au



## MCCPA MCBPA

See current catalogue for further detail



### Cleaning Guide:

Spraying cleaning products on to electrical products is not recommended.

It is important to ensure that switches are turned off before cleaning.

Do not use any cleaning sprays - only wipe down with damp cloth or rub with dry cloth. (Do not use an abrasive cloth as it may scratch the plastic).

Do not use harsh chemical cleaners as these can break down the plastic and cause it to crack.



## MEDICAT Protected Signs

Medicat Protected signage provides the professional medical occupational environment signage solution in accordance with AS/NZS 3003



MCCPA

Section 2 of AS/NZS3003 for CARDIAC PROTECTED AREAS (MCCPA application)

The MCCPA sign is constructed in accordance with clause 7.2 Figure 16 of the AS/NZS 3003 standard and follows the requirements for white print on a green background referenced to the signage requirements of AS 1319 (Safety signs for Occupational Environment). The signs allow for the addition of labels as required in the upper left required for clause 2.13, date and report number in lower right as well as the upper right for the commissioning detail. The sign dimensions comply with the requirements of 200mm wide by 90mm high with a tolerance of +5% -0%.



MCBPA

Section 3 of AS/NZS3003 for BODY PROTECTED AREAS (MCBPA application)

The MCBPA sign is constructed in accordance with clause 7.2 Figure 15 of the AS/NZS 3003 standard and follows the requirements for white print on a green background referenced to the signage requirements of AS 1319 (Safety signs for Occupational Environment). The signs allow for the addition of labels as required in the upper left required for clause 2.13, date and report number in lower right as well as the upper right for the commissioning detail. The sign dimensions comply with the requirements of 200mm wide by 90mm high with a tolerance of +5% -0%.

Catalogue Number	Description
MCCPA	Medicat Cardiac Protected Area Sign
MCBPA	Medicat Body Protected Area Sign